
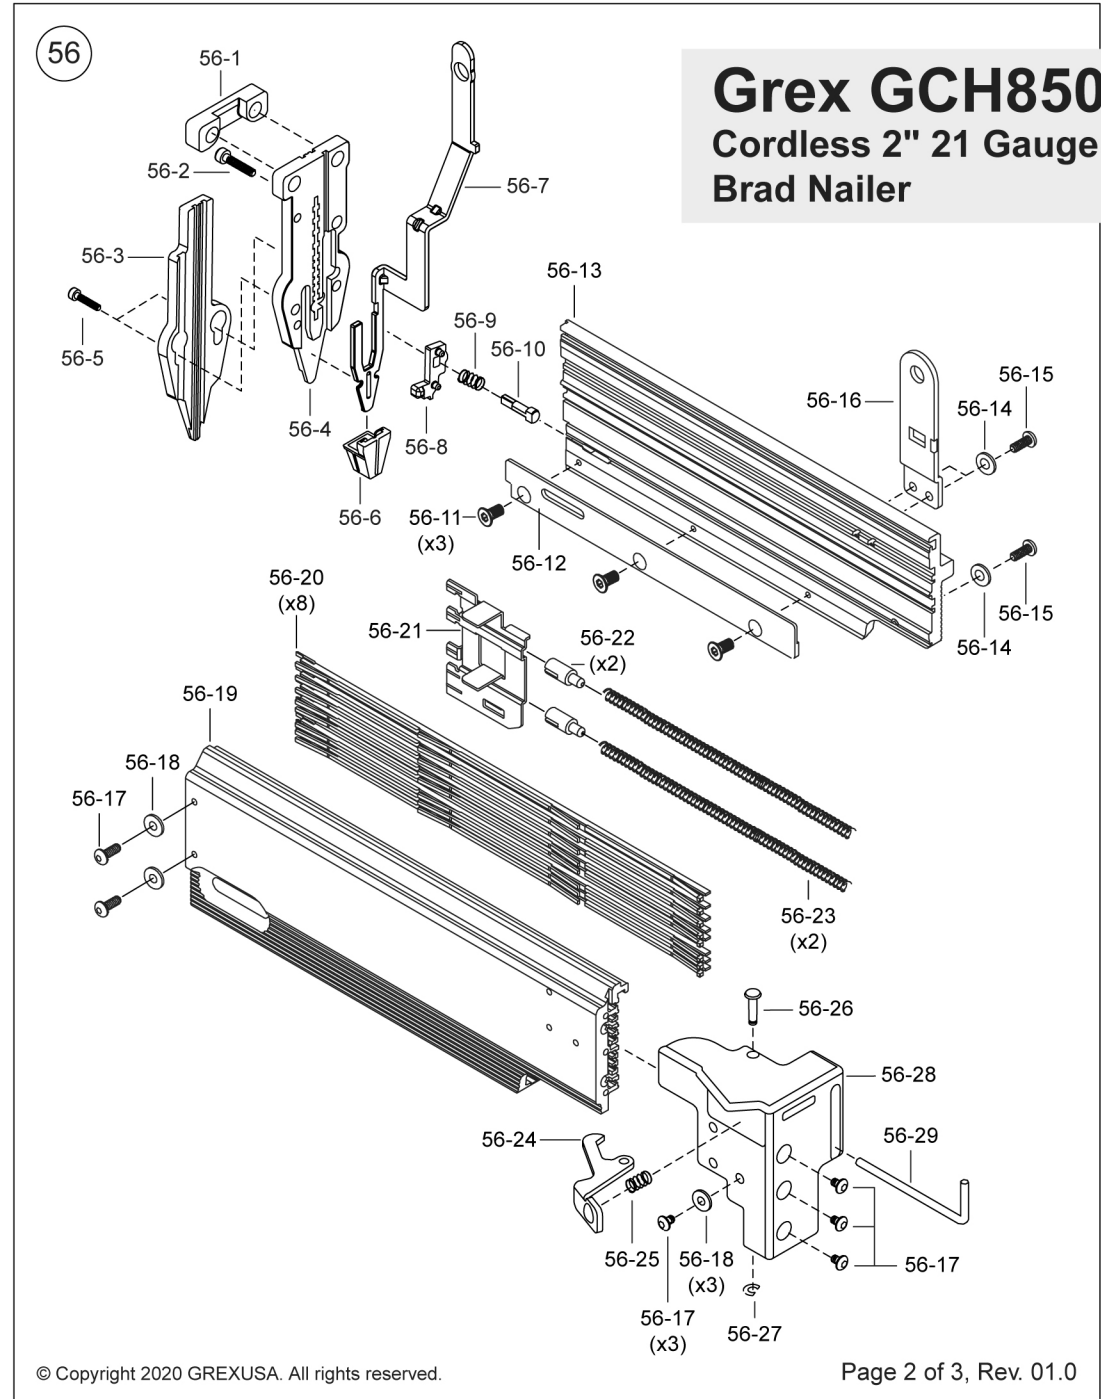
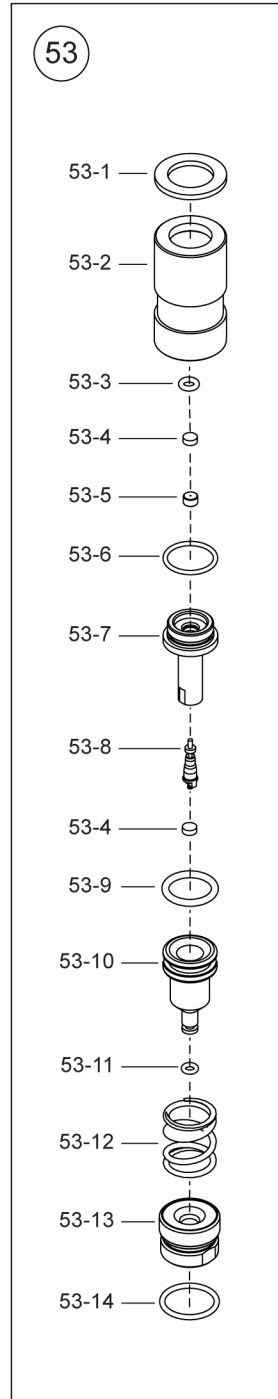
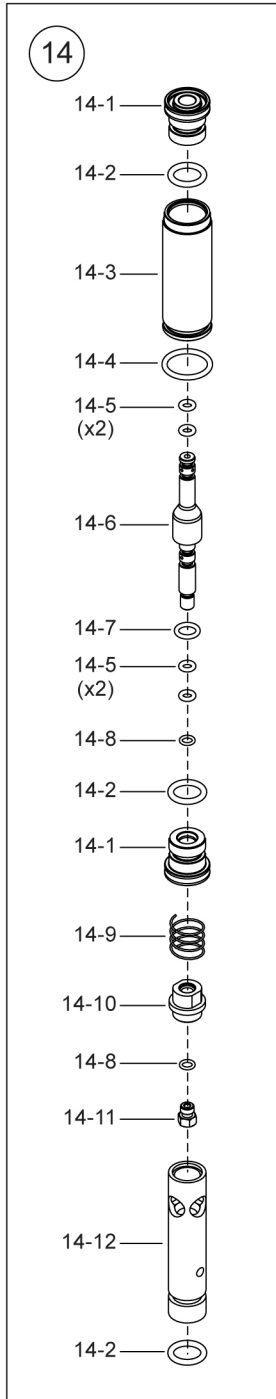
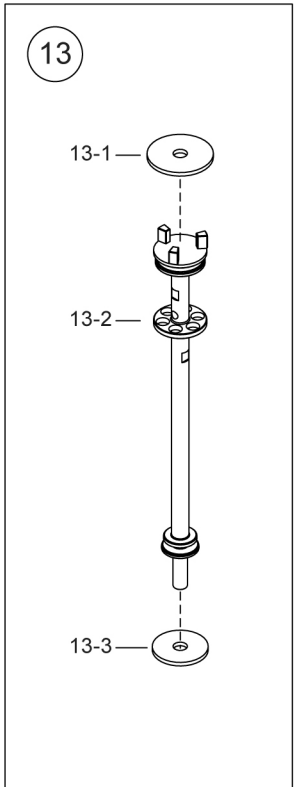


Grex GCH850

Cordless 2" 21 Gauge Brad Nailer

Grex GCH850

Cordless 2" 21 Gauge Brad Nailer

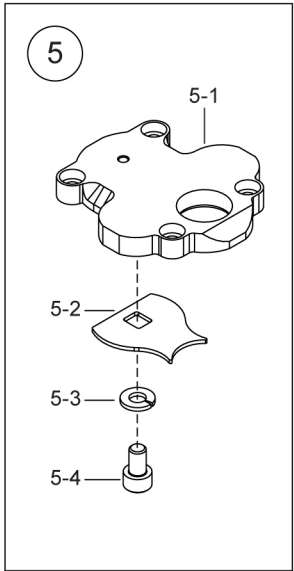

Grex GCH850 Cordless 2" 21 Gauge Brad Nailer

PARTS LIST

No.	Part No.	Description
1	99002	Hex Soc HD Screw
2	78041	Top Cap Cover
3	99018	Hex Soc HD Screw
4	97002	Spring Washer
5	-	Top Cap Assembly
5-1	78045	Top Cap
5-2	78046	Flow Plate
5-3	97007	Spring Washer
5-4	99050	Hex Soc HD Screw
6	78901	Top Cap Gasket
7	78035	Piston Seal
8	96512	O-Ring
9	78040	Piston Ram Assembly
10	96513	O-Ring
11	78047	Cylinder
12	78009	Bumper
13	-	Firing Valve Assembly
13-1	78902	Firing Valve Seal, Top
13-2	78048	Firing Valve
13-3	78903	Firing Valve Seal, Bot
14	-	Fueling System Assembly
14-1	78241	End Cap
14-2	96507	O-Ring
14-3	78049	Portion Chamber
14-4	96514	O-Ring
14-5	96508	O-Ring
14-6	78050	Valve
14-7	96130	O-Ring
14-8	96506	O-Ring
14-9	78051	Spring
14-10	78240	Fuel Nozzle Adapter

No.	Part No.	Description
14-11	78239	Fuel Nozzle
14-12	78238	Venturi
15	78042	Tool Housing, Left
16	99010	Hex Soc HD Screw
17	68009	Trigger Pin
18	78052	Trigger
19	95005	E-Clip
20	92002	Lock Nut
21	66532	Belt Hook
22	78053	Power Adjustment Core
23	96515	O-Ring
24	78054	Power Adjsutment Valve
25	96506	O-Ring
26	99650	O-Ring
27	78055	Power Adjustment Knob
28	78016	Ignitor Circuit Assembly
29	78056	Ignitor Assembly
30	78059	Tool Body
31	78014	Reed Valve
32	99022	Hex Soc HD Screw
33	78060	Firing Valve Seat
34	96505	O-Ring
35	78061	Bottom Cap
36	78062	Spring
37	78063	Safety Lock Pin
38	78064	Bushing
39	78065	Spring
40	78066	Trigger Arm
41	97008	Spring Washer
42	99029	Hex Soc HD Screw
43	78043	Tool Housing, Right

No.	Part No.	Description
44	85005	PH HD Self Tap Screw
45	78044	Air Intake Cover
46	99051	Hex Soc HD Screw
47	78057	Battery Terminal Wires
48	78058	Switch Assembly
49	78067	Rod
50	78068	Fuel Cartridge Cover
51	78905	Gasket
52	78069	Battery Cover
53	-	Fuel Regulator Assembly
53-1	78904	Gasket
53-2	78070	Fuel Regulator Housing
53-3	96509	O-Ring
53-4	78245	Filter
53-5	78246	Core Inlet
53-6	96103	O-Ring
53-7	78247	Fuel Regulator Core
53-8	78248	Schrader Valve
53-9	96510	O-Ring
53-10	78071	Fuel Regulator Valve
53-11	96508	O-Ring
53-12	78250	Spring
53-13	78072	End Cap
53-14	96516	O-Ring
54	78073	Bushing
55	88001	Hex Soc But HD Screw
56	-	Magazine Assembly
56-1	68015	Nose Cover B
56-2	99026	Hex Soc HD Screw
56-3	68801	Nose Cover
56-4	68802	Nose Guide Plate

No.	Part No.	Description
56-5	99002	Hex Soc HD Screw
56-6	68016	No Mar Tip
56-7	78074	Safety, GCP/H [56-7]
56-8	68018	Lock-Out Pin Cover
56-9	68019	Spring
56-10	78075	Lock Out Pin
56-11	91004	Hex Soc Flat HD Screw
56-12	68807	Magazine Rail Plate
56-13	68806	Magazine
56-14	97001	Spring Washer
56-15	88008	Hex Soc But HD Screw
56-16	68803	Magazine Support
56-17	88017	Hex Soc But HD Screw
56-18	89003	Washer
56-19	68809	Magazine Cover
56-20	68810	Magazine Nail Leveler
56-21	68805	Pusher
56-22	68804	Pusher Pin
56-23	68808	Pusher Spring
56-24	68027	Magazine Latch
56-25	68028	Spring, Magazine Latch
56-26	68025	Pin, Rear Cap
56-27	95001	E-Ring
56-28	68026	Magazine Rear Cap
56-29	AW03	3mm Allen Wrench